


PC Twin - USB or Serial Smart Card Reader Installation Guide


Configuring your smart card reader

Plug the cool gray connector of the cable into the back of the reader.

USB mode

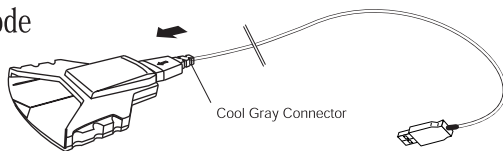

RS232 mode

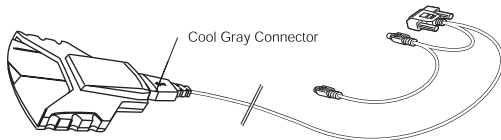

Note

Unplug the reader from the PC before removing the cable

Install the Smart Card reader software

- Download the PC/SC drivers from the following link <http://support.gemalto.com/> and follow the instructions
- Print the readme file for additional information

Accessories for PC Twin



Floppy bay adaptor



Desktop stand



Serial cable




USB cable

Connecting your Smart Card Reader to your computer


USB mode

- Plug the smart card reader into an available USB port.
- The reader is ready for use.

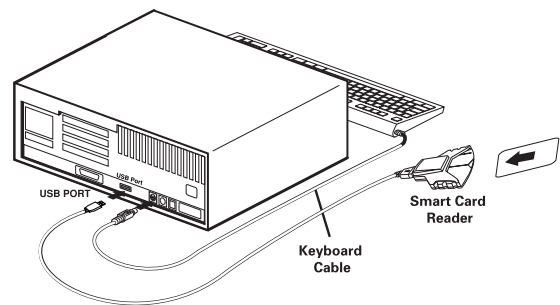

RS232 mode

- Turn off your computer. Plugging items into your computer while it's on can cause damage.
- Plug the green cable connector into the serial port of the PC.
- Plug the keyboard cable into the grey extension socket.
- Plug the purple connector of the reader into the keyboard port of the PC.

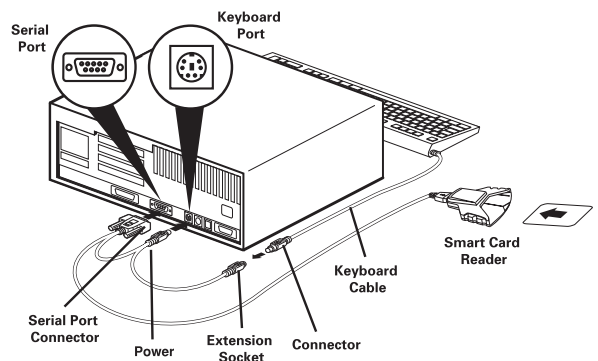

Note

- Cables can be purchased separately:
- USB Cable P/N : HWP109188
- RS232 Cable P/N : HWP108766